

INFORMATION

Total integrated dishwasher cm. 60 - 13 place settings - SGV4HVX31E - BOSCH

Main features

EcoSilence Drive brushless motor

AquaSensor, Load sensor

Control system

6 Programs: Eco 50 ° C, Auto 45-65 ° C, Intensive 70 ° C, Express 65 ° C, Silence 50 ° C, Preferred

Favorite program: initially set to Prewash

3 special options: Extra Dry, Half Load, SpeedPerfectPlus

Maintenance schedule

Delayed departure (1-24h)

Internal equipment

Third Basket

VarioFlex baskets

Lower basket with limit stop.

Up & Down device with 3 levels

EcoDosage

InfoLight

Inner tank material: base in Polinox, sides and top in stainless steel

Other characteristics

Three-level filter system

Heat exchanger.

Product dimensions (HxLxP): 81.5 x 59.8 x 55 cm

Safety

AquaStop: Flood protection system with lifetime warranty provided by Bosch in case of water damage.

Energy Label Data

Energy efficiency class¹: E

Energy² / Water³: 94 kWh / 9.5 liters

Capacity: 13 place settings

Program duration⁴: 3:45 (h: min)

Airborne noise emissions: 46 dB (A) re 1 pW

Airborne noise emission class: C

¹ On a scale of energy efficiency classes from A to G

² Energy consumption in kWh per 100 cycles (in the Eco 50 ° C program)

³ Water consumption in liters per cycle (in the Eco 50 ° C program)

⁴ Duration of the Eco program 50 ° C

Up & Down system with 3 levels

Maximum loading flexibility, the upper basket can be adjusted in height according to needs.

InfoLight - a red dot that provides information

A red LED dot on the floor indicates whether the fully integrated dishwasher is still in operation or has already finished.

EcoSilence Drive: powerful, long lasting, silent and efficient

The EcoSilence Drive brushless motor is extremely efficient, fast and silent and accurately adjusts the water pressure on the dishes for a suitable treatment for each type of load. All this to use less water, less energy and always have impeccable results.

Thanks to the effective dissolution of the detergent, EcoDosage guarantees optimal results

Also in terms of cleaning and silent washing. The detergent comes out of the relative dispenser and pours into a special container on the upper basket where it dissolves completely.